

HOW TO CHANGE A FLAT TIRE

STEP 1

Move the Automobile Off to The Side of the Road

1. Make Sure the Car is Completely Out of The Line of Traffic
2. Insure You Have Enough Room to Work Without Danger of Accidentally Being Struck by Traffic

DO NOT ATTEMPT TO CHANGE THE TIRE IF YOU ARE NOT SAFELY OUT OF TRAFFIC

3. If You Have Gloves, Consider Wearing Them Because [Your Hands Will Get Very Dirty.](#)

STEP 2

[Place the Car Into Park,](#)
Depress the Parking Break
and Turn Off the Engine

STEP 3

[Find an Object to Place Under the Wheel](#) Opposite the Damaged Tire. This Will Keep the Car From Rolling Accidentally.

STEP 4

Remove the [Jack, Spare Tire \(Called "The Donut"\) and Lug Wrench](#) From the Trunk and Place Them Near the Flat Tire

 
STEP 5

 
Adjust the Height of the Jack So That it Can Slide Under the Car Close to the Flat Tire

 
STEP 6

Insure That the Jack Base is Perpendicular to the Lifting Rail and That the [Base of the Jack is Resting Flat on the Ground](#)

The Jack Will Support the Wait of the Automobile and Need to Be Square and Level to Do So.

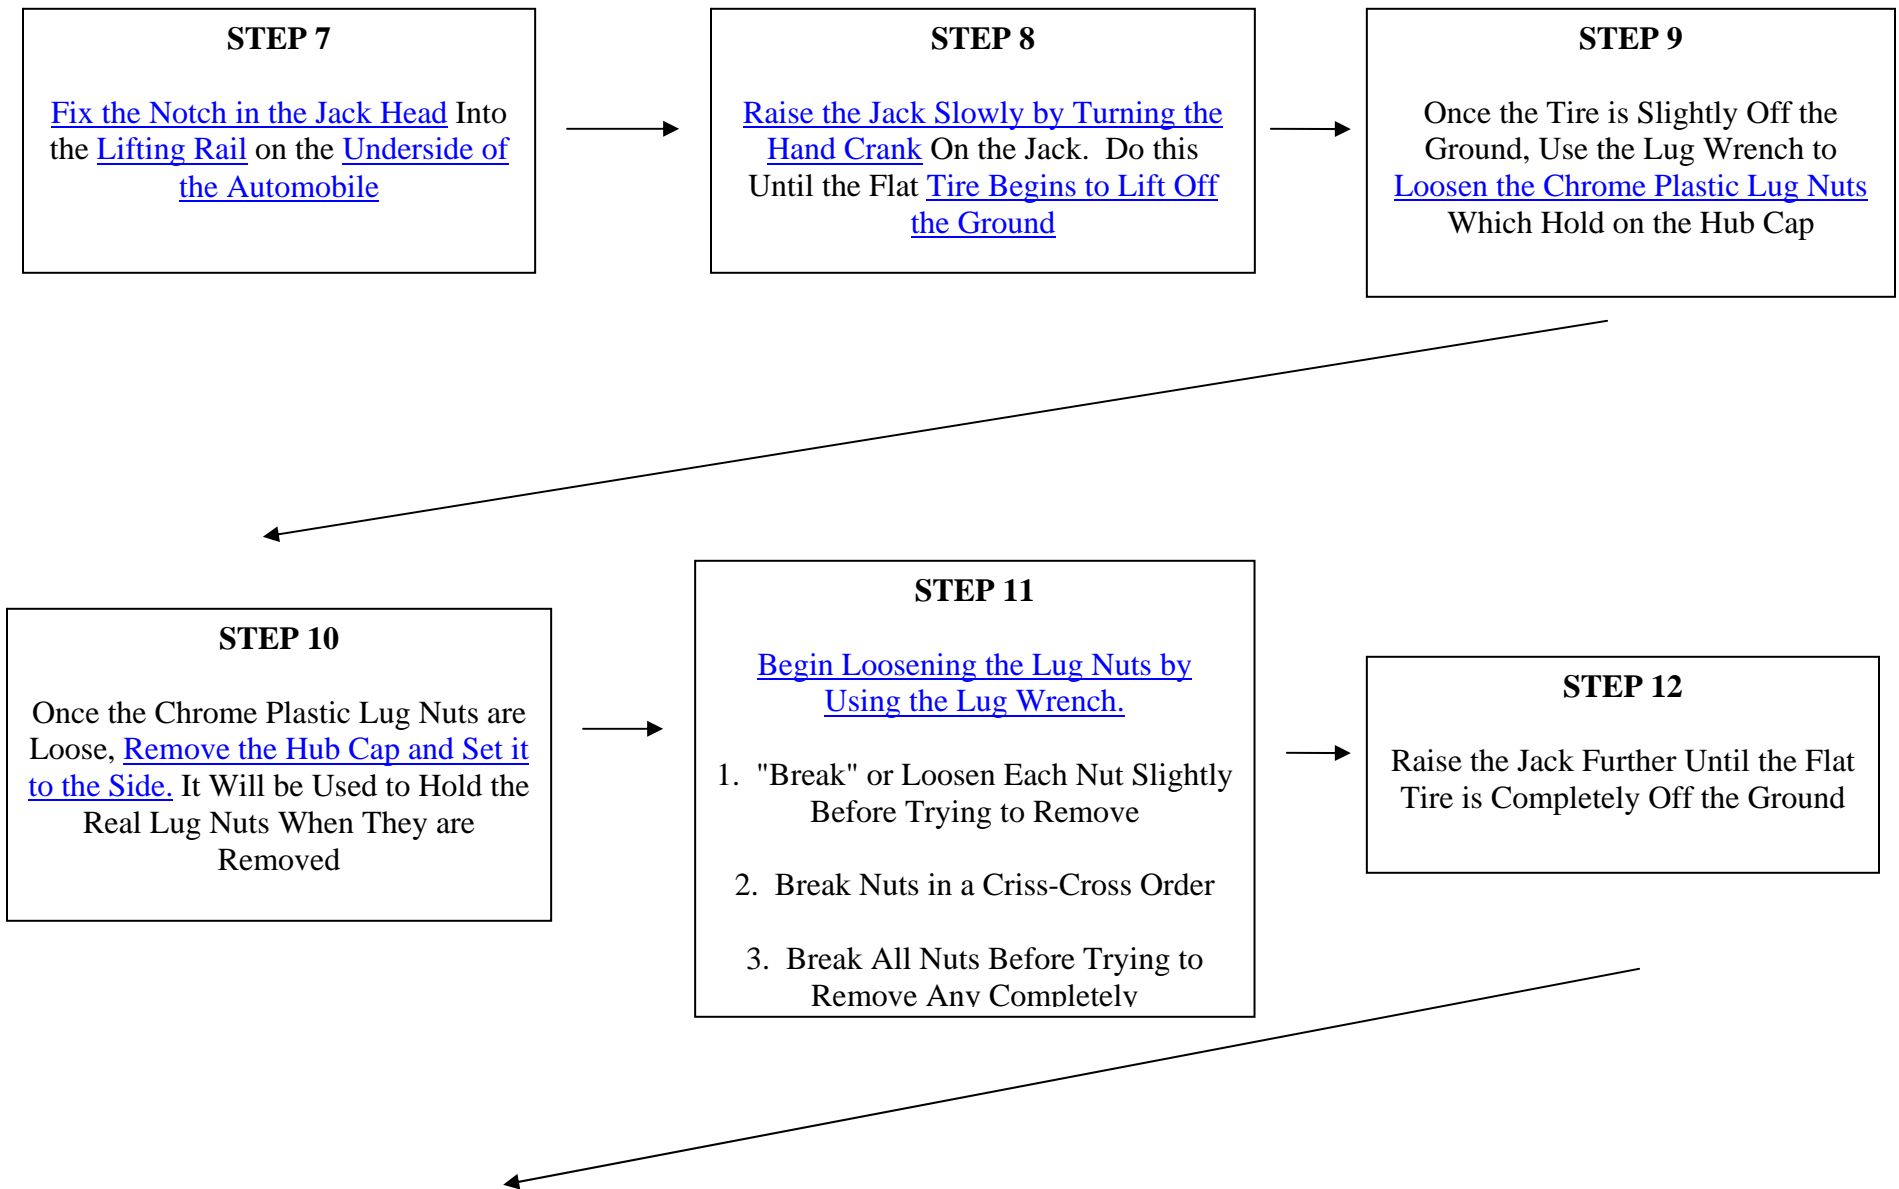

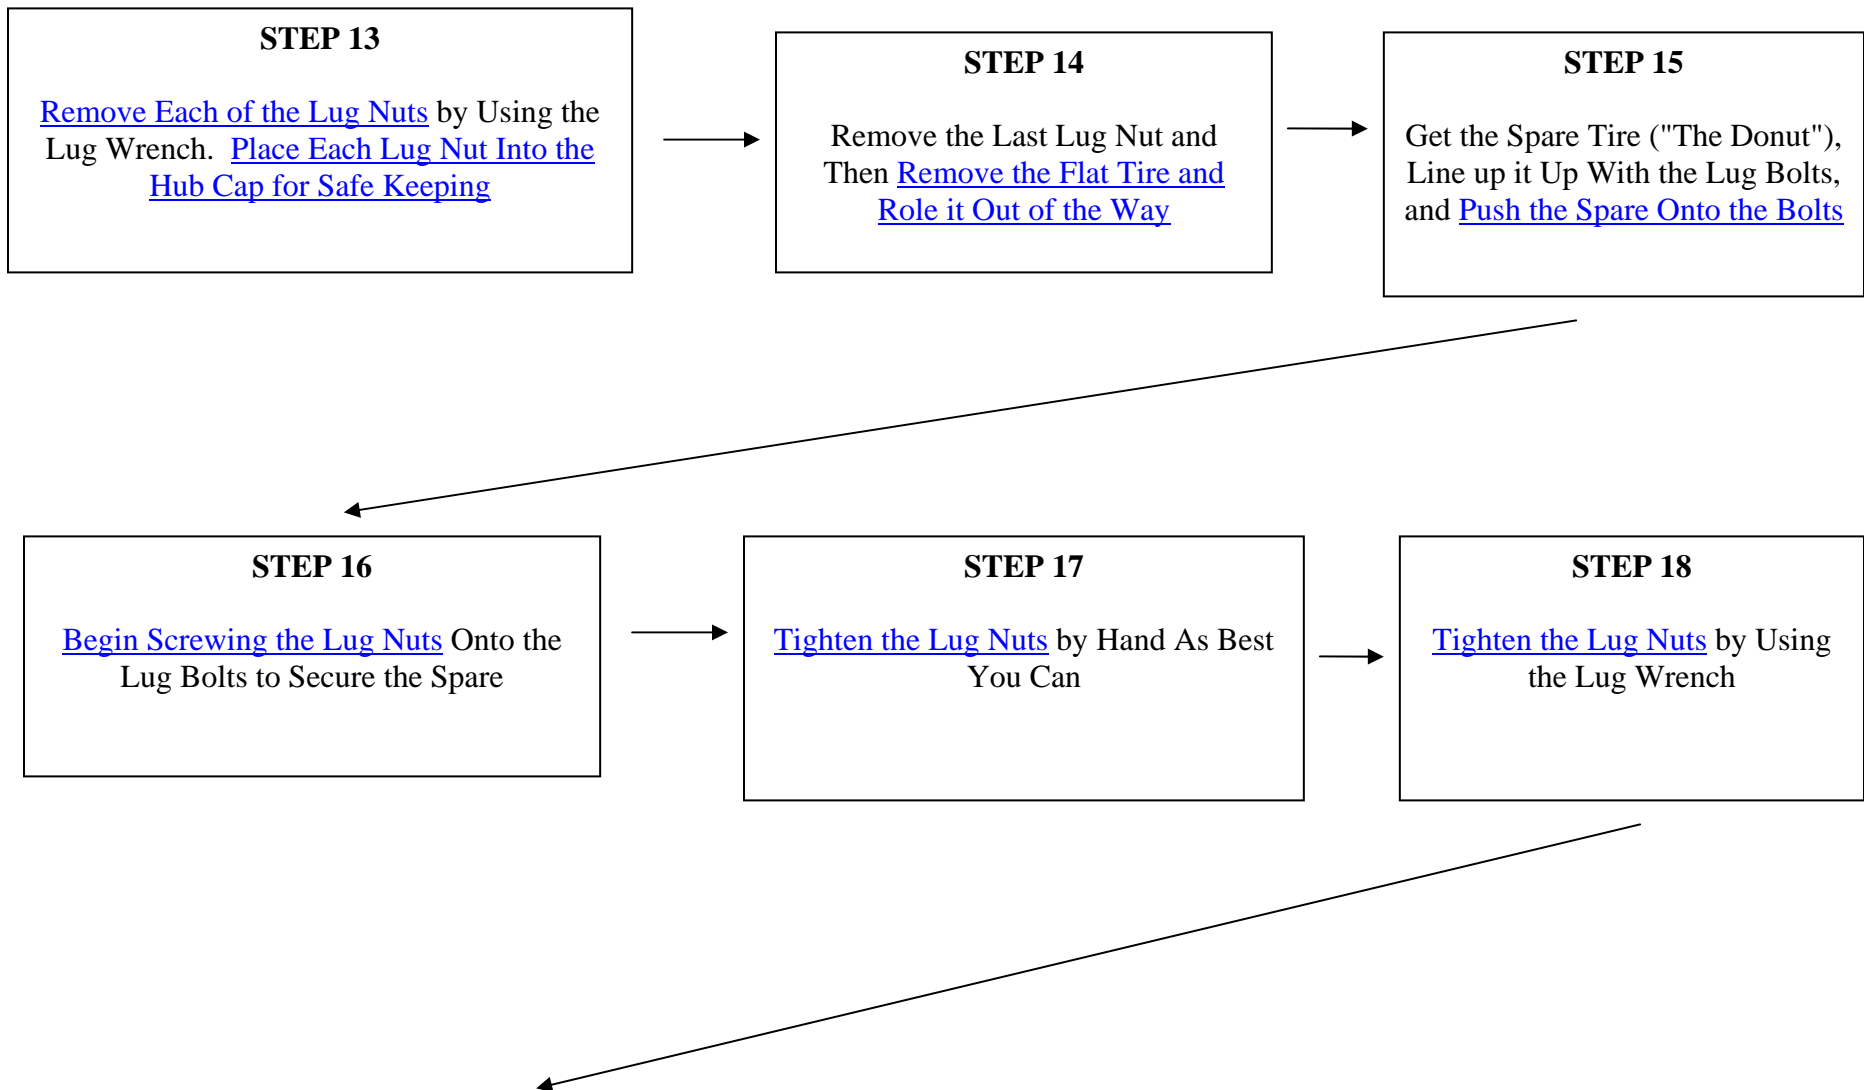

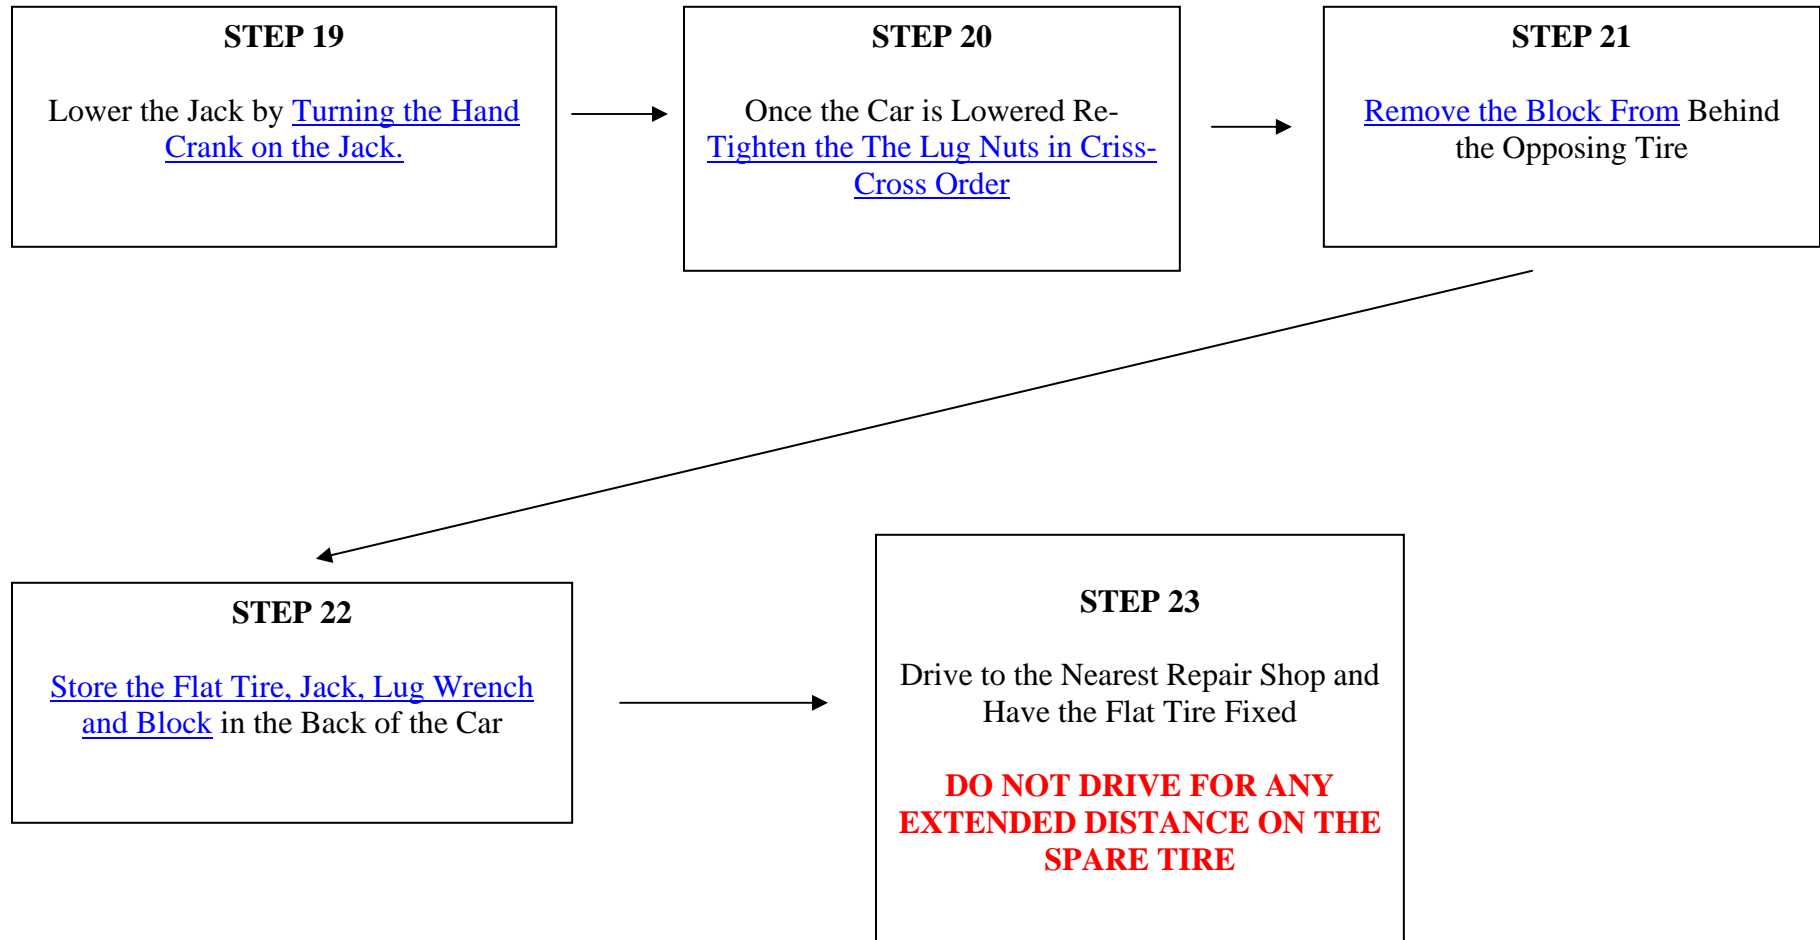

SPECIAL NOTES:

1. Revision 1 29 Sep 2004
2. Revision 2 22 June 2005